Start Here!

1 2 3

Quick Start Guide Next Page...

FP106

LCD Display
Caller ID
Phonebook
Speakerphone
Headset **(Optional)**

Quick Start Guide

Uniden®

INSTALLATION & SAFETY

Choosing the best location for your phone.

When choosing a location for your phone there are a number of appliances the phone should not be near, and areas you should avoid.

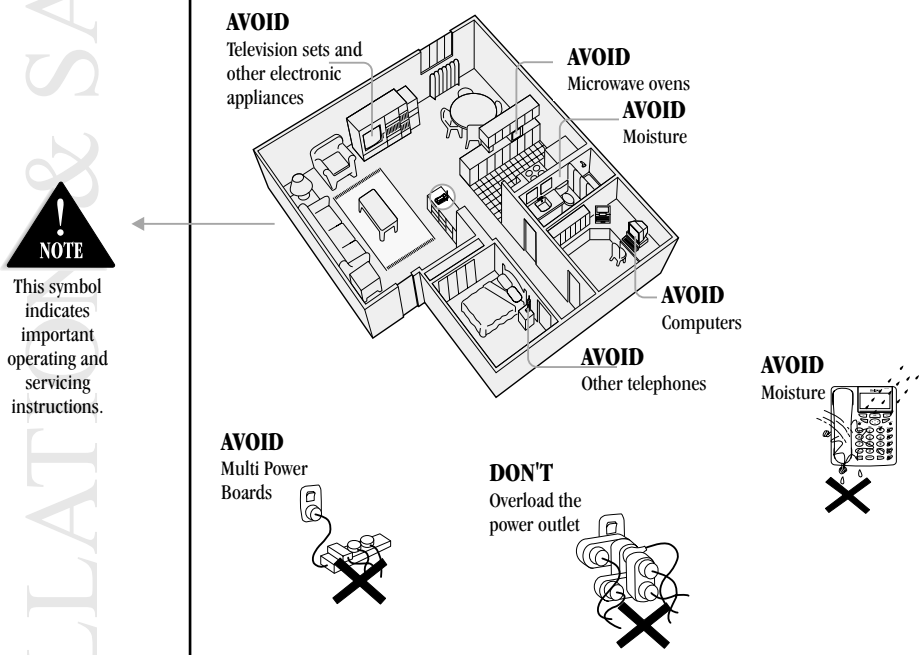

NOTE

This symbol indicates important operating and servicing instructions.

Start Here! 1 2 3

QUICK START GUIDE

This page is a very condensed version of the Owner's Manual. It is designed to allow you to get your phone installed and operating as quickly as possible -however it does not attempt to explain any of the advanced features of the FP106 series.

NOTE

Make sure the AC Adapter remains switched ON at all times. Use only the Uniden AC Adapter supplied with this unit.

NOTE

During a power cut or if the AC adapter is switched off, this telephone will still function as a basic phone but without the speaker phone and display.

1 Installing the Base Unit

1) Connect the AC adapter to the DC IN 9V jack and to a standard AC wall outlet.

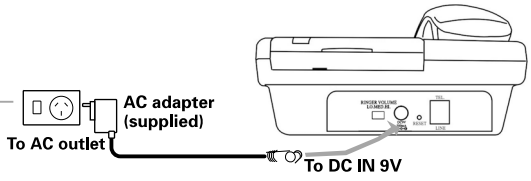

2) Connect the telephone line cord to the TEL LINE jack and to a telephone socket on the wall.

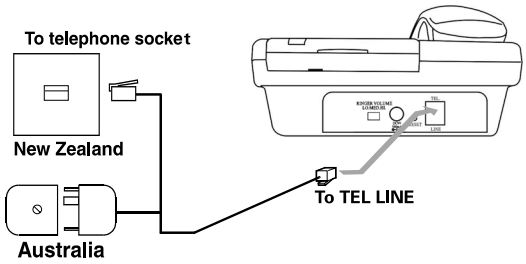

3) Set the base on a desk or tabletop.

4) For wall mounting, see "Mounting the Base Unit on a Wall" on page 8.

2 Handset Curly cord Connection

Plug one end of the Handset Curly Cord into the Handset and the other end into the jack on the side of the main base.

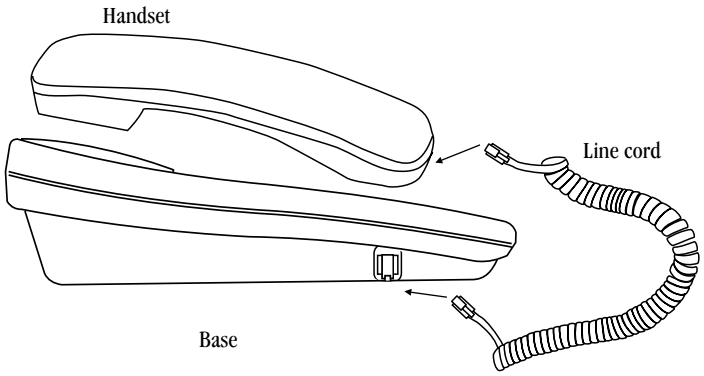

3 Using the Display, Scroll and the Soft keys

The FP106 has 3 soft key buttons,

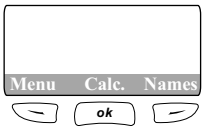

Options shown are an example only

Each soft key corresponds to the option displayed in the Display window above the keys.

If there is nothing displayed above the OK soft key then the OK button will respond as a confirmation button.

The FP106 also has Scroll keys which are used for selecting menus or options on the Display window. To use the Scroll keys press ▲ to move up a selection, press ▼ to move down a selection, press ◄ to move left or ► to move right.

Scroll Keys 

4 Using Your Phone

1. **To make a call:**
   Pick up handset or press speaker
   Listen for the dial tone, then dial phone number.

   Or for On Hook Dialling:
   Dial the number first, then pick up handset or press speaker

2. **To answer a call:**
   Pick up the handset to talk to the other party or press speaker to use the speaker phone.

3. **To end a call:**
   Place handset back into cradle of base unit or if using the speaker phone press speaker

5 Setting the Clock

If you subscribe to Caller ID the time & date will be set automatically with the first incoming call.
Or see 'Clock' on page 19 for manual instructions.

6 Storing Numbers

For storing phone numbers into memory please see 'Storing a Name with phone numbers' page 15.

End of Quick Start Guide

NOTE

The illustrations in this manual are intended as a guide and may differ from actual unit.

WELCOME

Congratulations on your purchase of this Uniden corded telephone. This unit is designed for reliability, long life and outstanding performance utilising the latest in telephone technology.

UNIDEN COMPANY PHILOSOPHY

To bring outstanding communication products to people's lives throughout the world.

FEATURES

Great features of this corded phone include

- On Hook Dialling
- Speaker phone
- Speaker phone Volume Control
- Handset Volume Control
- Ringer Volume Control
- 200 Name Phonebook with up to 3 numbers per name

Additional features

- Pre-Programmed Feature Buttons*
- Record Last 10 Redial Numbers
- Clock/Alarm/Appointment Setting
- Call Timer/Call Transfer
- Stutter Dial Tone Detection
- Calculator
- Call Waiting*
- Voice Mail Message Waiting Indicator* (VMWI)
- Redial/Flash and Pause
- Hearing Aid Compatible**

Advance Alpha Display Caller ID* Features

- 50 Memory Caller ID (missed & received calls)
- Store Caller ID records to Phonebook
- VIP Caller ID records with different Alert Tones
- Call back

* Caller ID, POP ID, Voice Mail, Mail Message Waiting Indicator (VMWI) and the Pre-Programmed features work only if you subscribe to the service provided by your local telephone company. There is usually a fee for this service.
** The handset earpiece is designed to be compatible with hearing aids that can be inductively coupled.

CONTENTS

CONTENTS

Installation & Safety..... (i)
Quick Start Guide..... (ii)

Important Information
- Welcome..... 1
- Uniden Company Philosophy..... 1
- Features..... 1
- Contents..... 2
- Included in your Package..... 4
- Controls & Functions..... 5
- Function flow Chart..... 7

Installation
- Wall Mounting..... 8

How to Use Your Phone
- LCD Display..... 9
- Speaker phone..... 9
- Using the Headset..... 9
- Connecting Your Headset..... 9
  - To Make A Call..... 9
  - To Receive A Call..... 9
  - To End A Call..... 9
- Redial..... 9
- Pause..... 10
- Flash..... 10
- Mute..... 10
- Hold..... 10

CONTENTS

CONTENTS

Using Caller ID.
- Missed Calls..... 11
- Received Calls..... 12
- Dialled Numbers..... 13

Phone Book..... 14
- Storing a name with phone numbers/setting VIP..... 15
- Searching for or editing an existing entry..... 15
- Browsing Entries..... 15
- VIP List..... 16

Calculator..... 16

Using the Pre-Programmed Feature Buttons
- Call Waiting..... 17
- Messages..... 17
- Call Divert..... 18
- Block CID..... 18

Advanced Settings
- Ring Tones..... 19
- Clock..... 19
- Alarm..... 20
- Call Screen: VIP Filter..... 20
- Stutter dial Tone..... 21
- Set Network Keys (Pre-Programmed Features)..... 21
- LCD Contrast..... 21
- Caller ID Insert '0' ON/OFF..... 22
- Reset..... 22

Troubleshooting..... 23
Warranty..... 24

CONTENTS

INCLUDED IN YOUR PACKAGE

Included in Your Package

1 x Base Unit



1 x Handset

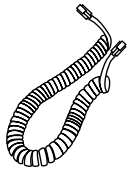

1 x Curly cord

1 x Line cord



1 x AC Adaptor



1 x Wall Mounting Bracket & screws



1 x Line cord Adapter (Australia Only)

NOTE

If any of these items are missing or damaged contact your place of purchase.

Additional Materials

- This Owner's Manual
- Other Printed Materials

CONTROLS & FUNCTIONS

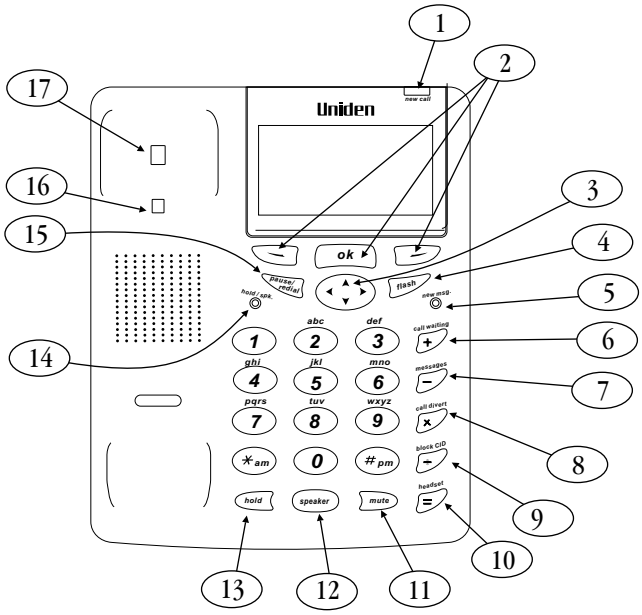

CONTROLS & FUNCTIONS

1 New Call LED

2 Soft Keys

3 Scroll Keys

4 Flash

5 New Message (VMWI) LED

6 Call Waiting

7 Messages

8 Call Divert

9 Block CID

10 Headset

11 Mute

12 Speaker

13 Hold

14 Hold/ Speaker LED

15 Pause/Redial

16 Handset Retainer Tab

17 On Hook Switch

CONTROLS & FUNCTIONS

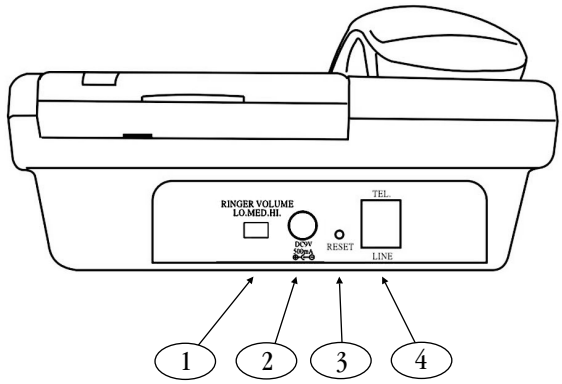

Rear Connections & Controls

1. Ringer Volume control (Please see Ring Tone Settings on page 19 for ringer **OFF** setting)
2. DC power socket
3. Telephone Reset
4. Telephone Line socket

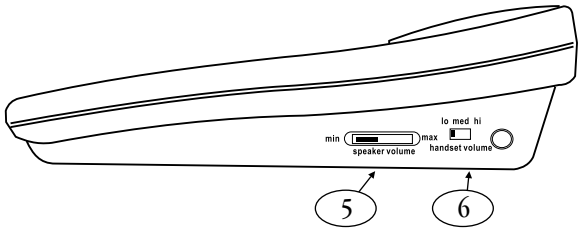

Side Controls

5. Speaker Volume control
6. Handset Volume control

FP106 FUNCTION FLOW CHART

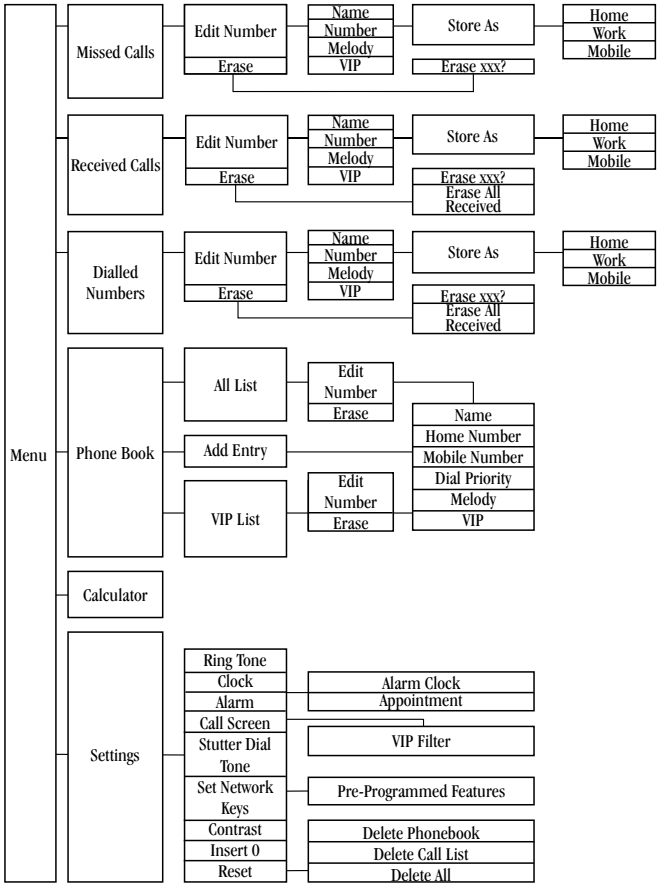

INSTALLATION

WALL MOUNTING

If required, you can mount your phone directly on a wall.

- Before mounting your phone, please consider the following:
- Select a location away from electrical cables, pipes or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Make sure the wall material is capable of supporting the weight of the telephone.
- Use the screws (supplied) with anchoring devices suitable for the wall material where the Telephone will be placed.

1. Insert two mounting screws 85 mm apart. Allow about 5mm between the wall and screw heads for mounting the phone.

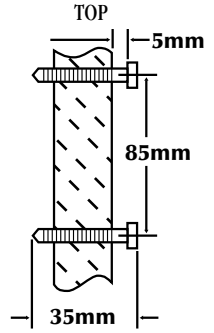

2. Gently pull out the handset retainer tab, turn 180° and re-fit.
See Controls & Functions Page 5
for location of Handset Retainer Tab.

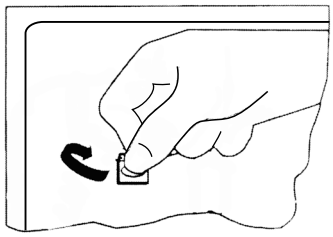

3. Attach the wall mounting bracket to the bottom of the telephone as shown.

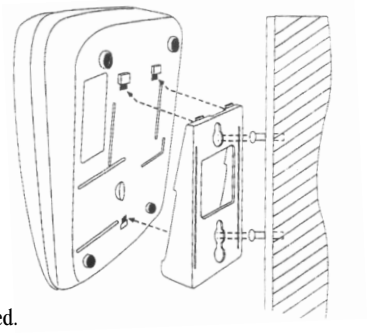

4. Place the base unit on the screws and push down until it's firmly seated.

HOW TO USE YOUR PHONE

The following page information expands on the basic phone use as explained in Step 4 of the Quick Start Guide.

LCD Display:

ICON	NAME
	: APPOINTMENT
	: MUTE
	: SPEAKER
	: MSG WAITING
	: CID
	: PHONE BOOK

The Icons shown here will display at the top of the Display window when such functions are in operation.

The icon names will appear at the bottom of the Display window.

SPEAKER PHONE

You can continue a call on Speaker phone mode anytime by pressing the speaker button during a call, then place the Handset on the base.

When speaking, Speak clearly towards the base of the telephone at approximately 1M distance.

Also, you can transfer a call to the Handset anytime during a call by simply picking up the Handset.

USING THE HEADSET (optional)

Connecting Your Headset

Disconnect the handset curly cord from the side of the base and replace with the optional headset cord. Leave the handset resting in the handset cradle.

To make a call:

1. Press headset button.
2. Dial the required number.

To receive a call:

1. Press headset button to receive a call.

To end a call:

1. Press headset button to end a call.

REDIAL

If you want to redial the last number dialled, simply pick up the handset or press the speaker button, then press the pause/redial button. The telephone will automatically dial the last dialled number.

PAUSE

During the Phonebook storage procedure, you may wish to press the pause/redial button to insert a pause between numbers. (This is sometimes useful for accessing a switch board, telephone banking or long distance dialling).
Pressing pause/redial button more than once will increase the pause between digits.
Each time the pause/redial button is pressed, a 'P' will show on the LCD to indicate a 2 second pause in the dialling sequence. Each pause counts as one digit.

FLASH

The Flash feature can be used to momentarily break the line for transferring calls on a PABX system or for a Call Waiting service.
While talking, you hear the call waiting signal (series of beep tones), press the flash button to switch call and put the current call on hold.
To switch back to original call, press the flash button.

MUTE

Press the mute button to turn off the handset microphone, allowing private conversations in the same room without the other party hearing.
Press the mute button again to resume the conversation with the calling party.

HOLD

To place a call on hold, press the hold button and hang up.
To begin conversation again, pick up the handset or press the hold button or pick up an extension phone (if available).

USING CALLER ID

When subscribed to Caller ID the caller's number appears on the Display window, usually after the first ring.

Missed Calls

When someone calls and the call is not answered their number is stored in the Missed Calls list. This function allows you to view a list from which somebody tried to all you with no success.
Using the Soft Key options provided in the Missed calls menu you can view the date and time of each call, and view, edit, erase or save the number. Each memory location can store a maximum of 20-digit number and 16-digit name.

NOTE

If there is an answer machine on the same line which answers the call then the call will be treated as a Received Call

Edit Number ▶ Erase
▼
Name
▼
Number (Store home/work/mobile 3 different numbers)
▼
Melody
▼
VIP

Display Example:

The 1st number indicates the highlighted call.
The 2nd number indicates the total number of current missed calls

To review missed calls

1. Select **menu** scroll to **Missed Calls** and press ok
2. If the same number called several times, it shows the number of times next to the telephone number.
3. Any number that has been set as a VIP call will display the VIP icon.
4. If no missed calls, the screen displays “No Missed Calls”.

CALLER ID

Received Calls

This function allows you to view a list from which you have recently accepted calls.

Using the Soft Key options provided in the Received calls menu you can view the date and time of each call, and view, edit, erase or save the number. Each memory location can store a maximum of 20-digit number and 16-digit name.

Edit Number ▶ Erase
▼
Name
▼
Number (Store home/work/mobile 3 different numbers)
▼
Melody
▼
VIP

Display Example:

The 1st number indicates the highlighted Received call.

The 2nd number indicates the total received calls.

To Review Received Calls:

1. Select **Menu** then scroll to **Received Call** and press ok
2. If the same number is received twice then only the details of the latest call is stored and displayed.
3. Any number that has been set as a VIP call will display the VIP icon.
4. If no received calls, the screen displays “No Received Calls”.

Dialled Numbers

This function allows you to view a list of the last 10 phone numbers that you have recently called or tried to call.

Using the Soft Key options provided in the Dialled calls menu you can view the date and time of each call, and view, edit, erase or save the number. Each memory location can store a maximum of 32-digit number and 16-digit name.

Edit Number ▶ Erase
▼
Name
▼
Number (Store home/work/mobile 3 different numbers)
▼
Melody
▼
VIP

Display example:

The 1st number indicates the highlighted call out of the last 10 calls.

To Review Dialled Numbers:

1. Select **Menu** then scroll to **Dialled call** and press ok
2. If the same number is dialled twice, the list displays the number twice.
3. If the number is a VIP call, the VIP icon will display next to the number.
4. If no dialled numbers, the screen displays "No Dialled Numbers".

PHONE BOOK

You can store phone numbers and the associated names in the memory of the phone book. You can store up **200** names with 3 different numbers (each of which can have up to 32 digits) and other settings.

In standby mode (on or off hook) press ▲ or ▼ on the scroll key to jump to the start or end of the phonebook. Pressing ◄ on the scroll key will jump to the list of last dialled numbers.

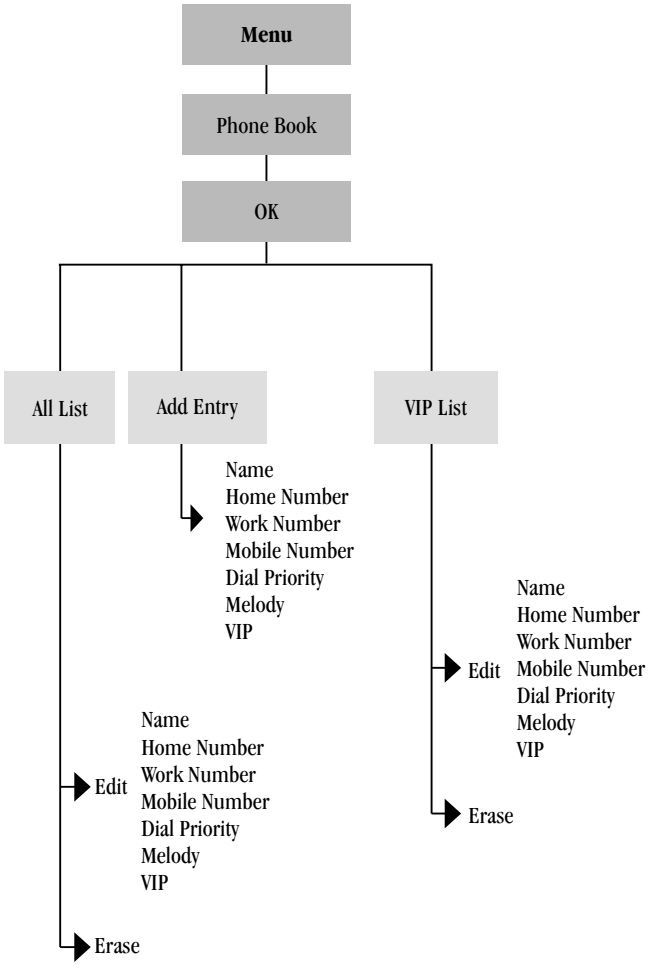

Display example:

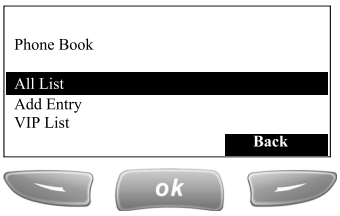

Storing a name with phone numbers/ Setting VIP

NOTE
OR press **Names** in the standby display as a shortcut.

1. Select **Menu** then choose **Phone book** and press ok
2. Scroll to **Add Entry** and press ok
3. Key in the Name and number (or numbers if available)

   The first character in the **Name** field must be a letter (for searching or browsing). If you make a mistake, you can remove characters to the left of the cursor by pressing **Delete** as many times as necessary.
   Pressing and holding **Delete** clears the screen.

   To switch between upper and lower character case, press #pm The symbol ABC or abc shown at the top of the display indicates the selected case. The phone reverts to upper case for every new entry. To insert a space press 0
   Pressing *am brings up a list of special characters. Move through the list to the desired character with ◀ and ▶ and press **Use** to insert it in the name.

   After entering Name, Number (Home, Work, Mobile: Press ▼ to skip a number entry) press ▼ to view **Dial Priority, Melody** and **VIP** options. Press ◀ or ▶ to change or select these options.

   If setting VIP to ON then the Melody selection must be set to **Ring1, Ring2, Ring3** or **No Selection**.

4. Press ok to confirm.

Searching for or Editing an Existing Entry

1. Select **Menu** then scroll to **Phone book** and press ok
2. Scroll to **All List** and press ok
3. Key in the first letter of the name to jump to first corresponding entry.
4. Use ▲ or ▼ to reach the desired name.
5. Press ok to dial the preset priority number. Or press **details** to view other numbers.
6. Press **Options** to view **Edit Number** or **Erase** options.
7. Scroll to **Edit Number** to edit the name, numbers, dial priority, melody and VIP settings for the current entry.

Browsing entries

Pressing the ▲ or ▼ button from standby mode allows browsing of the phone book. Keying in the first letter of the name jumps to first corresponding entry.

PHONE BOOK

VIP LIST

NOTE

VIP needs to be selected to ON before an entry will appear in the VIP list. Please see Setting VIP on page 15.

The VIP list is a list of names for whose phone number(s) triggers a secondary beeping tone. The VIP list requires the Caller ID service to work.
You can transfer any Caller ID record into the VIP list.

The Melody selection for each Name entry must be set to **Ring1**, **Ring2**, **Ring3** or **No Selection** for the VIP beeping tone to function.
Please see Call Screen: VIP Filter on page 20 to activate VIP function.

Display example:

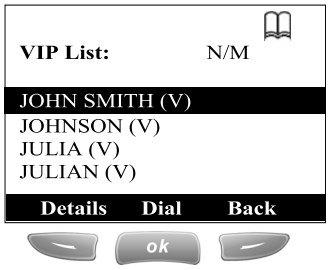

1. Select **Menu** then choose **Phone book** and press ok
2. Scroll to **VIP list** and press ok
3. Use the ▲ or ▼ buttons to scroll through the VIP list.
4. When you locate the desired number, press ok to dial the number or enter **Details** mode for the detail information.

Calculator

You can select the calculator mode by pressing the ok soft key to select '**Calc**' when in the standby mode, OR follow these instructions.

1. Select **Menu** then choose **Calculator** and press ok
2. Using numeric keypads and call waiting + messages − call divert × block CID ÷ headset = on the right side for fundamental operations of arithmetic.

   The display showing "E" means the content is too long or has an error.
   The #pm key is for a decimal point.

3. Select button to leave.

USING THE PRE-PROGRAMMED FEATURES BUTTONS

Easy access to some of most popular network service features have been programmed into the telephone for your convenience.

CALL WAITING

If you subscribe to Call Waiting service, Call Waiting lets you know if you have another call while you are already on the phone. Call Waiting sends you four beeps when you have another call.

- Four beeps tell you someone's calling you when you're on another call. However, you have longer than this to answer the second call. The second caller simply hears a ringing tone and will usually keep holding for six to eight rings.
- Excuse yourself from the first caller, then press the

button on your phone. You can then talk to the second caller.
- To return to the first caller, simply press the

button again and you will be able to continue your original conversation.

MESSAGES

If you subscribe to a Call Minder Service, the

button allows you to access your Call Minder mailbox.

When a new message has been left in your mailbox, the New Message (Voice Mail Waiting Indicator) LED on your phone will begin to flash and will flash on the display.

NOTE

There may be a delay in these indicators turning off.

To Use Messages feature:

1. Press the

button.
2. Enter your PIN at the prompt and follow the recorded instructions.

When you have cleared the message (from any phone), the New Message LED will turn off.

CALL DIVERT

If you subscribe to a Call Diversion service, Call Diversion allows you to activate the Call Diversion number you have registered against the 161 Call Diversion code.

To Turn Call Diversion On:

1. Press the call divert (×) button **once** and wait for the confirmation tone.
   The display shows '**Call Divert On**'. If required, place the confirmation call.
2. Press speaker to hang up the phone.

To Turn Call Diversion Off:

1. Press the call divert (×) button **twice** and wait for the confirmation tone.
   The display shows '**Call Divert Off**'.
2. Press speaker to hang up the phone.

BLOCK CALLER ID

Each time you make a call, your telephone number is automatically forwarded to the party you are calling (unless your number is a private number). In certain cases you may wish to prevent your number being sent, follow these steps.

1. Pick up the handset or press the speaker button. Wait for the dial tone.
2. Press the block CID (÷) button.
3. Dial the telephone number of the person you wish to call. Your telephone number will be withheld for this call only.

ADVANCED SETTINGS

RING TONE

There are 4 different ring tones, 12 melody music and ring OFF for your options.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Ring Tone** and press ok to confirm.
3. Scroll to desired tone.
4. Press ok to confirm.

Selecting a Melody tone as the main ring tone will not affect the VIP function.

CLOCK

If you do not subscribe to a Caller Display service you will need to set the clock as follows.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Clock** and press ok to confirm.
3. Use the keypad buttons to set the date and time manually following the cursor position.
4. Press *am or #pm
5. Press ok to confirm.

If you make a mistake use the ◀ or ▶ buttons to move the cursor and re-enter the correct information.

Clock Display Form

You can choose between an analogue and a digital display as follows.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Clock** and press ok to confirm.
3. Press ▼ and then ▶ key to choose Digital or Analog.
4. Press ok to confirm.

SEND

NOTE

The Phone alarms at a specified time everyday unless you turn the alarm clock off.

NOTE

An error tone sounds when an invalid time is entered.

ALARM

The phone can be set to alarm at a specified time. Please see the Clock and Appointment instructions below for actual settings.

ALARM CLOCK

When the alarm time is reached, the phone sounds an alert tone. When the phone is alerting, "Alarm Clock" is shown on the LCD display. Press any key to stop the alarm.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Alarm** then select Alarm clock and press ok
3. Use the keypad buttons to set the alarm time.
4. Scroll ▼ to **On/Off**, then scroll ◄ or ► to turn **ON or OFF.**
5. Press ok to confirm.

ALARM APPOINTMENT

The function helps you to keep track of reminders, calls that you need to make, meetings, and birthdays. The phone sounds an alarm tone when the alarm time is reached. Press any Key to stop the alarm.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to select **Alarm Appointment** and press ok
3. Use the keypad buttons to set the alarm time.
4. Scroll ▼ to **Note** to write a note. Please see **Storing a Name with Phone numbers** on page 15 for instructions on how to enter text.
5. Scroll ▼ to **On/Off**, then scroll ◄ or ► to turn **ON or OFF.**

CALL SCREEN

You can set VIP Filter. Call Screen allows you to set a filter for your VIP calls.

VIP FILTER

In the case that the VIP filter is set **ON**, all calls will ring normally but numbers in the VIP list will ring with a second beeping tone as well. In the case that the VIP Filter is **OFF** all calls ring normally with no secondary beeping tone.

1. Press **Menu** then scroll to **Settings** and press ok
2. Scroll to **Call Screen** then press **VIP Filter**.
3. Press ◄ or ► to turn VIP Filter **ON** Or **OFF.**
4. Press ok to confirm.

STUTTER DIAL TONE

The Stutter Dial Tone Detect enables the phone to listen to the phone line for the stutter dial tone used to indicate a message waiting on a voice mail service.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to "**Stutter dial tone**" then press ok
3. Press ◄ or ► to turn Stutter Dial Tone **ON** Or **OFF.**
4. Press ok to confirm.

SET NETWORK KEYS **(Pre-programmed keys)**

Pre-programmed Telecom keys can be programmed into the memory of your telephone. Each memory location can store a maximum of 16 digits.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to "**Set Network keys**" then press ok
3. Choose the desired pre-programmed key then press ok
4. Enter the new number using the keypad (up to 16 digits).
5. Press ok to confirm.

LCD CONTRAST

You can choose the desired luminance of the Display Window by following the steps below.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Contrast** then press ok
3. Scroll ◄ or ► to choose the desired level.
4. Press ok to confirm.

NOTE

If you want to return to the factory default, follow the steps to enter the original number or enter Menu-Settings Reset Delete All on Page 22 to reset all pre-programmed codes to factory default.

Caller ID Insert "0" On/Off

On some telephone networks, to correctly display and dial Caller ID telephone numbers, a "0" may need to be inserted.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Insert 0** then press ok
3. Scroll ◄ or ► to select **ON** or **OFF**.
4. Press ok to confirm.

RESET

You can delete the Phonebook entries (including old and new entries), Caller Display lists (including old and new entries) or delete all using the instructions below.

DELETE PHONE BOOK

All records of phone book will be deleted.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Reset** then press **Delete Phonebook**.
3. Scroll ▲ or ▼ to select **Yes** or **No.**
4. Press ok to confirm.

DELETE Call List

All missed calls, received calls and dialled number call list will be deleted.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Reset** then press **Delete Call List**.
3. Scroll ▲ or ▼ to select **Yes** or **No.**
4. Press ok to confirm.

DELETE All

Deletes all stored memories and resets all pre-programmed codes to factory default.

1. Select **Menu** then scroll to **Settings** and press ok
2. Scroll to **Reset** then press **Delete All**.
3. Scroll ▲ or ▼ to select **Yes** or **No.**
4. Press ok to confirm.

TROUBLESHOOTING

If your telephone is not performing to your expectations, here are some suggestions on how to resolve the problem.

Problem	Suggestion
Can't make or receive calls. No Dial Tone.	• Make sure you use only the line cord supplied with this telephone. • Check that both ends of the telephone line cord and Handset cord are plugged in. • Plug another telephone into the telephone socket and check for a dial tone.
Can't hear the telephone ringing.	• Make sure the AC adaptor is plugged in and the wall socket switched on. • Make sure you do not have too many telephones connected to the telephone line. • Adjust the Ringer Volume Control.
Speaker phone volume is too low.	• During speaker phone conversation, adjust the speaker volume slider control on the side of the telephone.
Handset does not hang up in the wall mount position.	• Make sure the Handset Retainer Tab has been turned around (point facing up) and the Handset is placed firmly into the cradle.
New Call LED keeps flashing.	• All new calls must be reviewed before the new call LED stops flashing.
Caller Display feature not working Pre-programmed features not working.	• These are all subscription services. To subscribe, or check the pricing and availability, please contact your line services provider.
Blank or faint LCD screen.	• Make sure the AC adaptor is plugged in and the wall socket switched on. • Check / adjust the contrast control setting as described on page 21.
Speaker phone or display not working.	• Make sure the AC adaptor is plugged in and the wall socket switched on.

WARRANTY

WARRANTY

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited. ABN 58001 865 498
Uniden New Zealand

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its FP106 (herein after referred to as the Product), to be free from defects in materials and craftmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of not further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

PARTS COVERED: This warranty covers for one (1) year, the FP106 Unit and Handset only. All accessories (Cables etc.) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA	UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION	SERVICE DIVISION
345 Princes Highway,	150 Harris Road,
Rockdale NSW 2216	East Tamaki, Auckland
Fax (02) 9599 3278	Fax (09) 274 4253
www.uniden.com.au	www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

THANK YOU

FOR PURCHASING A UNIDEN PHONE

Uniden

© 2004
Uniden Australia Pty Limited
Uniden New Zealand Limited